


**Ref:KNH1004**




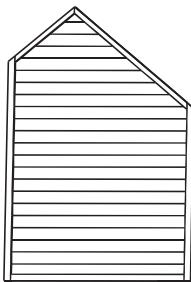





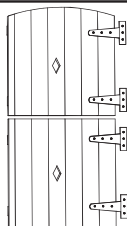




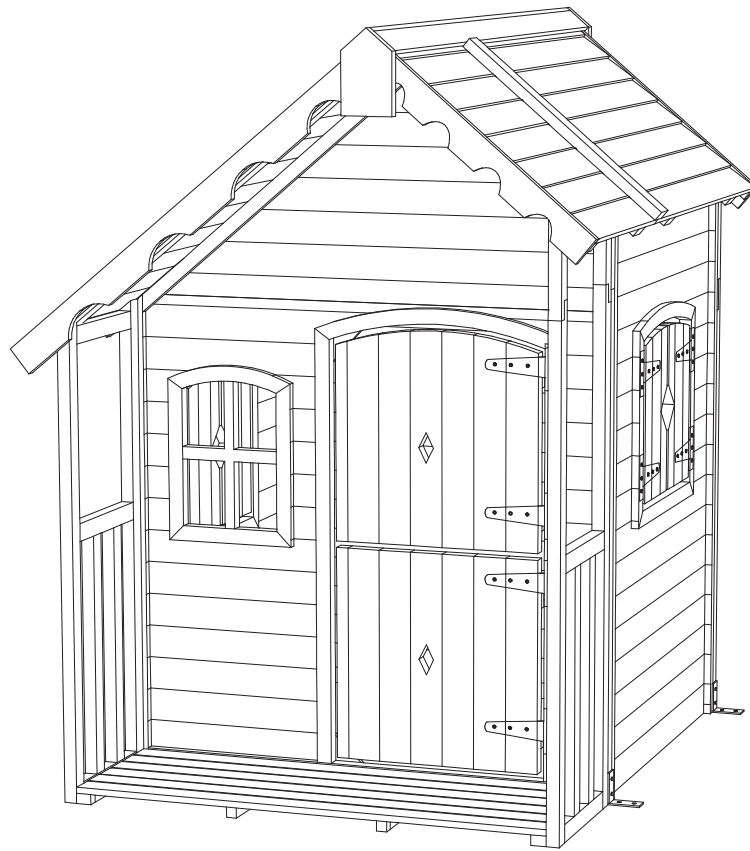





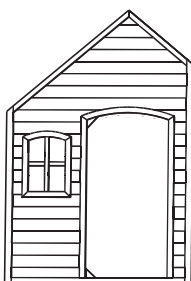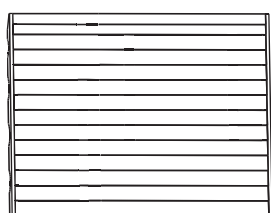


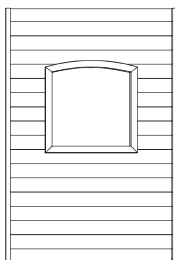









**ANNY C/BARANDILLA**

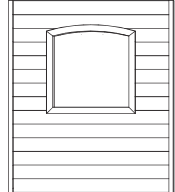


info@kovyx.com / CIF B83904086  
C/ de las Moreras 1- Naves 7- 10  
28350 - Ciempozuelos (Madrid)




**Instrucciones de Montaje**  
**Assembly Instructions**  
**Instructions de Montage**  
**Instuzòes de montagem**

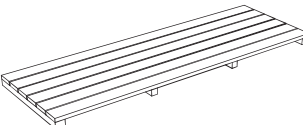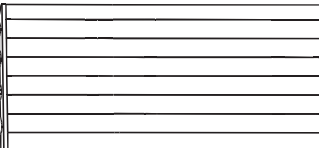1		1pc	13		1pc
			14		1pc
2		1pc	15		1pc
			16		1pc
			17		1pc
			18		2pcs
			19		1pc
3		1pc	20		1pc
			21		7pcs
			22		4pcs
4		1pc	23		2pcs
5		1pc	A	 3.5*60	4pcs
6		1pc	B	 3.5*50	26pcs
			C	 3.0*30	10pcs
			D	 3.0*25	14pcs
			E	 3.0*20	15pcs
			F	 3.0*16	36pcs
7		1pc	G	 3.5*24	8pcs
			H		8pcs
			I		4pcs
			J	 3.0*18	36pcs
8		2pcs			
9		1pc			
10		1pc			
11		1pc			
12		1pc			


When installing the door and the window, please make sure that there is gap 13mm left

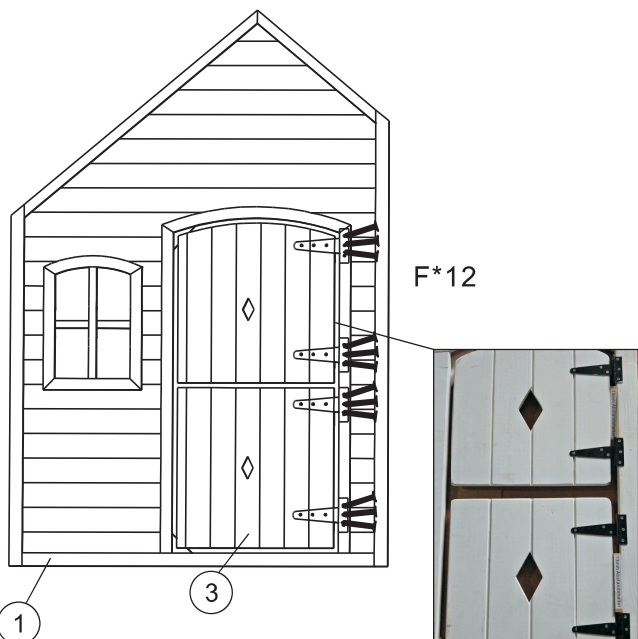


Step 1

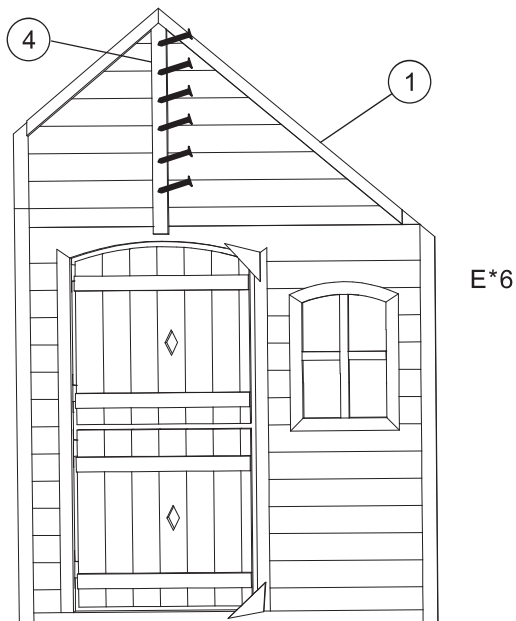


Step 2

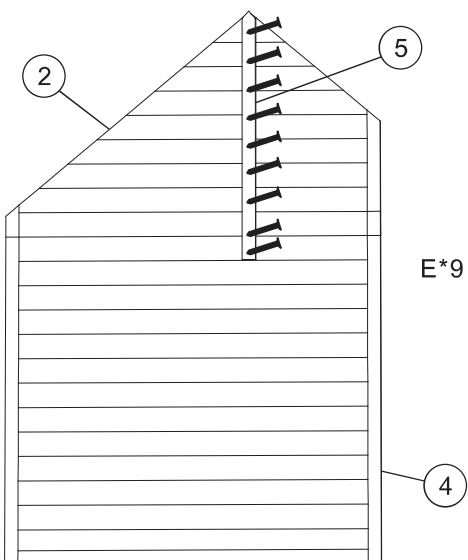


Step 3

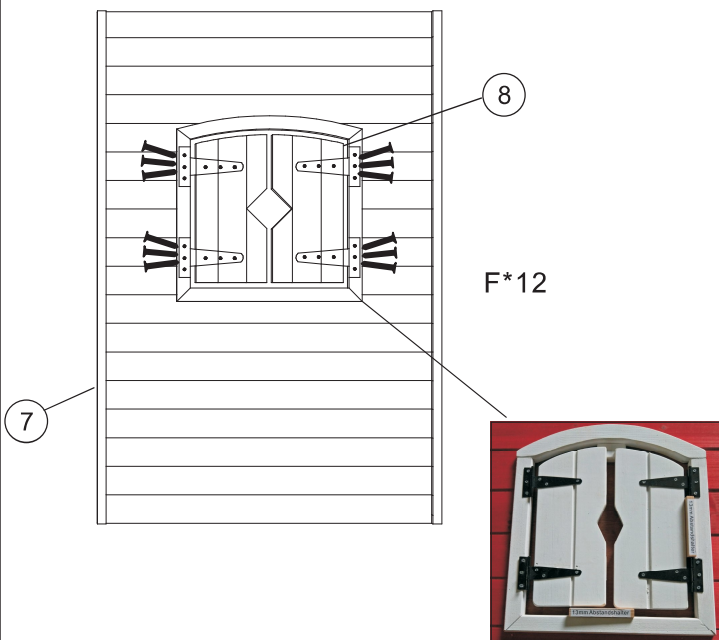


Step 4

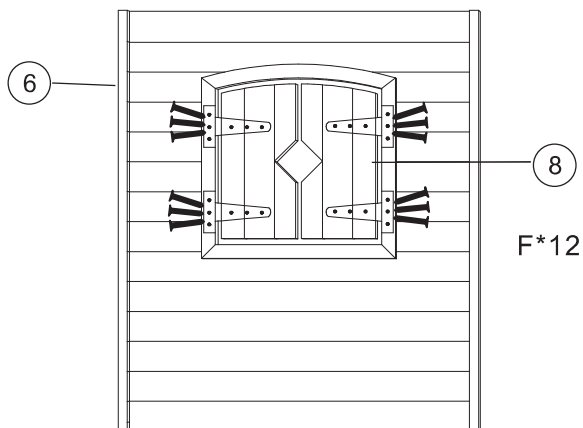

Step 5

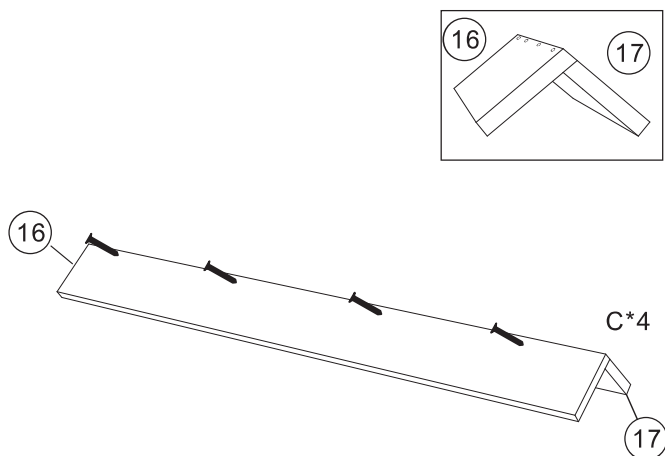


Step 6

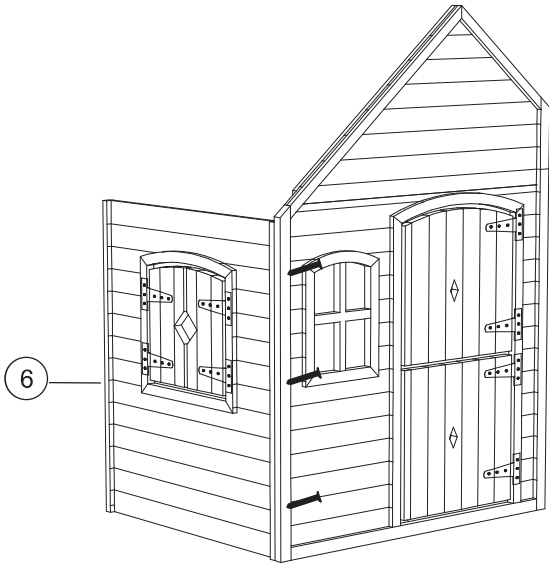


B\*3

Step 7

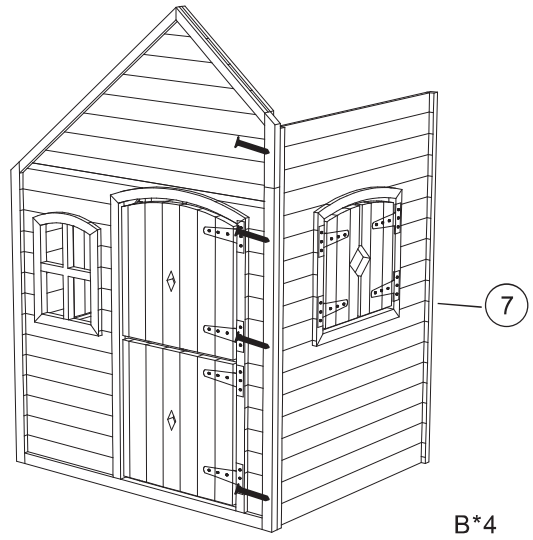


B\*4


Step 8

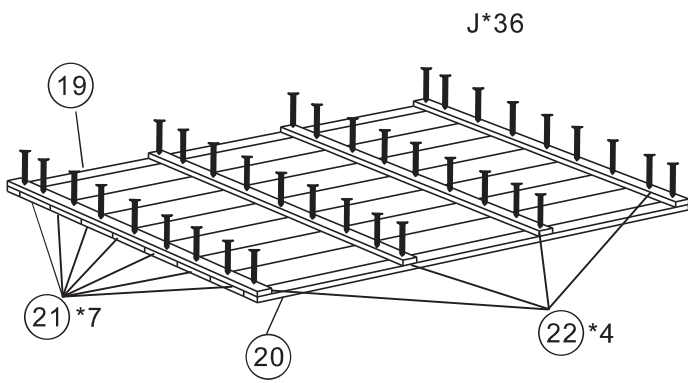

Step 9

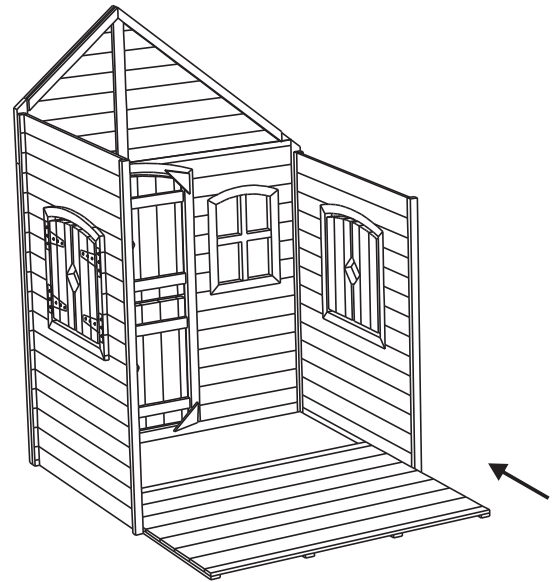


Step 10

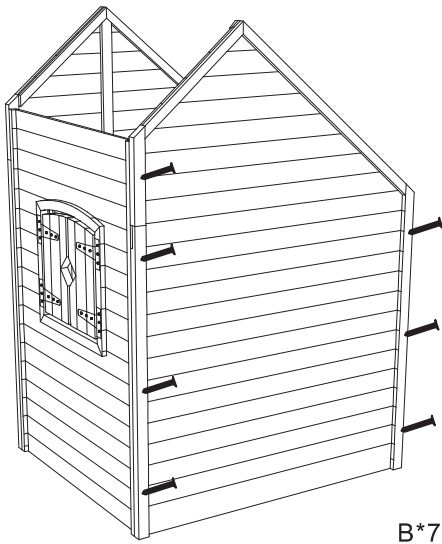

B\*7

Step 11

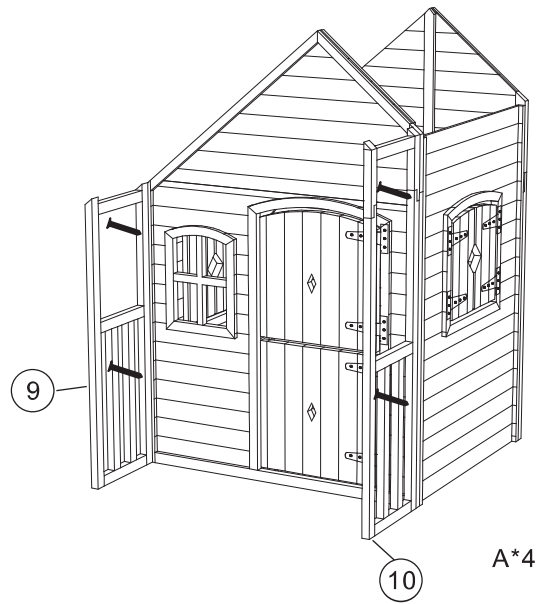

A\*4

Step 12

